


SHAD

ARIIC CHINF 318 '21 TOP MASTER A0CH31ST

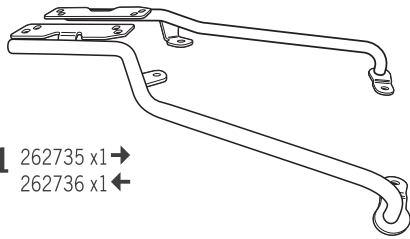

1 262735 x1 →
262736 x1 ←




2 261277 x2
Ø20 Ø11 x 25



3 261072 x2
Ø20 Ø9 x 32



4 303045 x4
Ø8



5 304170 x4
M8 x 60 Din 7380

! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

