


SHAD

MOTO MORINI X-CAPE 649 '22

TOP MASTER M0XC62ST

BCN



1 263052 x 1




2 260954 x 4
Ø14 Ø9 x 16



3 260417 x 4
Ø16 Ø9 x 16



4 303045 x 2
Ø8



5 304174 x 2
M8 x 80 DIN 7380



6 303025 x 2
Ø10



7 304331 x 2
M8 x 75 DIN 7991

WARNING!

GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.


E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

1

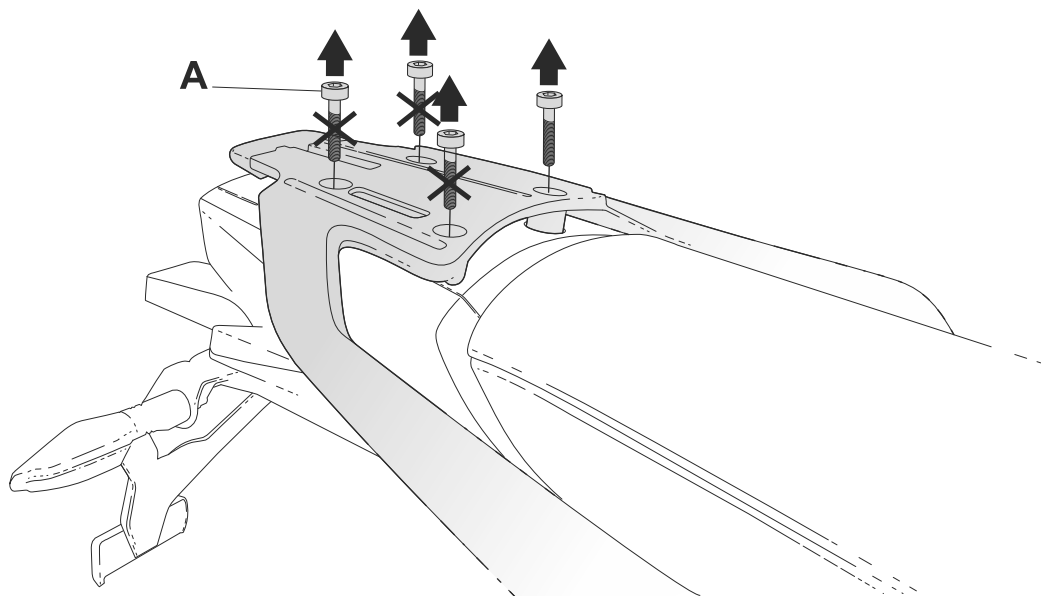

2

