


# SHAD

## KAWASAKI 650 RS '21 - TOP MASTER K0ZR61ST

BCN

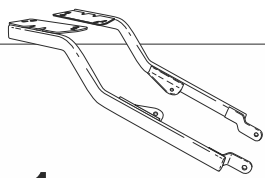

**1** 263062 x 1  
263063 x 1



**2** 260596 x 2  
Ø16 Ø9 x 20



**3** 303045 x 4  
Ø8



**4** 303027 x 2  
Ø8



**5** 304039 x 2  
M8 x 40 DIN 7380



**6** 304028 x 2  
M8 x 25 DIN 7380

### WARNING!

**GB** Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

**E** No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

**D** Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

**I** Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

**F** Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

**1** x2

