


SHAD


HONDA ADVENTURE 160 '22 KIT TOP H0XD12IST

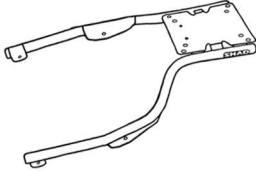

1 H0XD12IST-IM x1



2 H0XD02-01 x1
H0XD02-02 x1



5 EOD028 x6
Ø8



3 H0XD03-01 x1
H0XD03-02 x1



6 EOD016 x2
M8X35 DIN 912



4 FOD015 x2
Ø15 Ø10 x L5



7 EOD013 x4
M8X20 DIN 912



! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

