


SHAD

VOGE 300 DS '21 TOP MASTER V0DS31ST

BCN

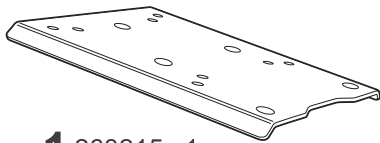

1 263215 x1



2 260641 x2
Ø16 Ø9 x 22



3 304225 x2
M6x45 DIN 7991



4 260731 x2
Ø16 Ø9 x 10



5 304029 x2
M6x35 DIN 7991



6 304091 x1
M6x20 DIN 7991

WARNING!

GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

